



REVERSING THE DOOR OPENING

Your dryer is supplied with a reversible door. To change the direction of opening proceed as follows for your type of door.

Dryers fitted with hinge cover:-

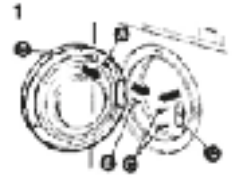


1
Open the door. Undo screw (A) remove switch strike (B) and replace screw. Remove screws (C) and latch plate (D). Remove hinge cover screw (E). Close the door.

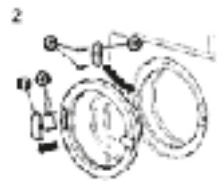

2
Pull the hinge cover (F) forwards to remove it. Remove two outer screws (G). Remove door. Fit latch plate (D) with screws (C).




3
Reverse door and fit to dryer in closed position. Refit screws (G) and hinge cover (F). Open the door.

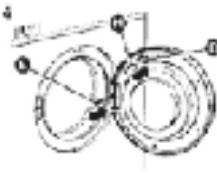

4
Fit screw (E) to secure hinge cover. Remove screw (H) at top of door and refit switch strike (B) as shown.


Dryers fitted without hinge cover:-

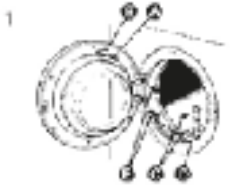


1
Open the door. Undo screw (A) remove switch strike (B) and replace screw. Remove screws (C) and latch plate (D). Remove hinge block screws (E). Remove door from hinge blocks.



2
Remove hinge screws (F) and hinge (G) and refit to opposite side as shown.

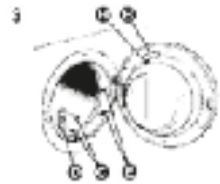

3
Refit latch plate (D) with screws (C). Remove screw (H) at top of door and refit switch strike (B) as shown. Fit door to hinge blocks and secure with screws (E).

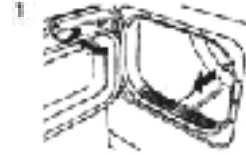

Large Door Opening:-

First remove the child safety peg from the top of the door by rotating 90° anticlockwise. Remove the 4 screws from the door hinges. Do not use a power screwdriver as this may damage the threads. Remove the four screws from the opposite side of the door opening. Place these screws in the other side of the door opening. Reverse the door and re apply the hinge screws. Replace the child safe peg in the top of the, now reversed, door.


LARGE BASIC

B & L '06

Crosslee plc, Halifax, U.K. HX3 8DE

4213 094 5932C

INSTRUCTIONS FOR USE

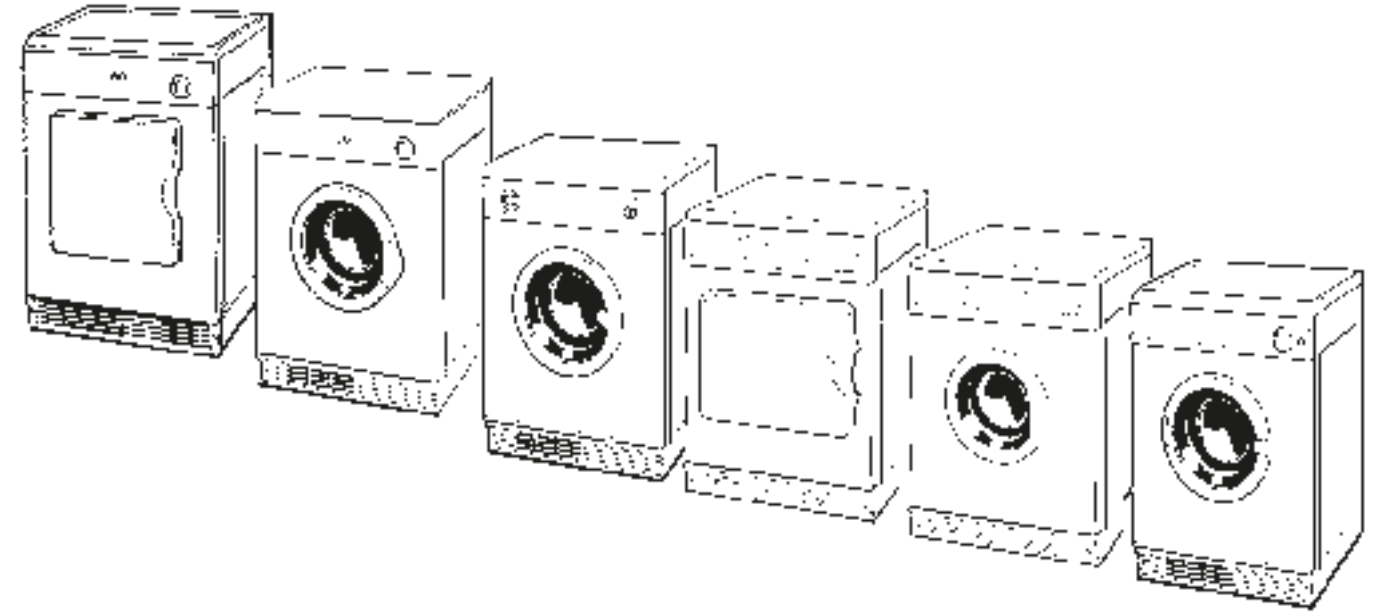

IMPORTANT:

PLEASE READ THESE INSTRUCTIONS THOROUGHLY BEFORE USING THIS APPLIANCE. KEEP THEM IN A SAFE PLACE FOR FUTURE REFERENCE.

IMPORTANT USER INFORMATION

These notes are provided in the interest of safety. You must read them before installing or using the appliance.

THIS APPLIANCE MUST BE EARTHED

- It is dangerous to alter or modify the product in any way other than fitting authorised accessories.
- The tumble dryer should be serviced by an appointed service organisation and only genuine parts used.
- The room must be adequately ventilated to avoid back flow of gases into the room from appliances burning gas or other fuels. This includes open fires.
- The dryer should not be placed directly next to ovens or cookers, as the performance of the dryer may be affected.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
- The rear of the dryer gets quite hot during use, position the dryer so that the back is not accessible while in operation, but ensure that the sides have a space available to allow airflow.
- Any electrical work required to install the appliance should be carried out by a qualified person.
- Do not stack the tumble dryer on top of other appliances without the correct stacking kit.
- Under no circumstances should anything other than the recommended articles be placed in the tumble dryer.
- It is important to clean the lint filter after each drying cycle or the restrictions to airflow will extend drying times and could cause the safety cut-out to trip.
- It is important to clean fluff from the window of the dryer and around the door seal after each drying cycle. Failure to do so could result in water leaking.
- We recommend that the appliance is unplugged each time after use. It should always be disconnected from the electricity supply if it is to be left unattended for long periods (i.e. weekends, holidays etc.).



This label, positioned on the rear of your dryer, indicates the surface is hot when in operation - avoid touching


- DO NOT use the tumble dryer if you suspect that it is damaged in any way. Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause serious injury. Consult your local appointed service engineer and insist on genuine spare parts. The special mains cable and plug assembly must only be replaced with a genuine part available from the manufacturer or our appointed service agent.
- DO NOT attempt to dry dripping wet articles or items containing foam rubber or rubber-like materials.
- DO NOT place articles in the dryer if anything other than a water solution has been used in the cleaning process.
- DO NOT allow children to tamper with the controls and keep them away from the dryer when it is in operation.
- DO NOT exceed the recommended maximum load.
- DO NOT allow fluff to accumulate around the tumble dryer - Risk of fire.
- DO NOT block the air inlets at the front and back of your dryer.
- DO NOT use a two-way or multi-way adapter, or extension lead. The dryer must be connected to its own individual socket.

INSTALLATION

Position the tumble dryer so that the plug remains accessible after installation. Do not block the vent at the front of the dryer, as this will impair the working of the machine. Do not install in a bathroom or shower room. The appliance must not be installed behind a lockable door, a sliding door or a door with hinges on the opposite side to that of the tumble dryer.

TUMBLE DRYER VENTING

Your tumble dryer will release warm, damp air in one of three ways:

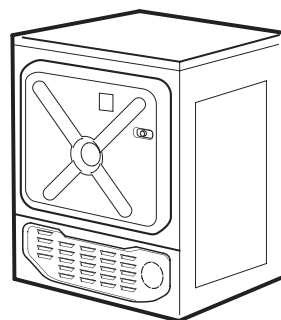

1) EXTENDABLE REAR VENTING

A long flexible vent hose is built into the dryer and can be extended from the large opening at the rear of the machine.

2) FIXED REAR VENTING

Venting is through the large opening at the bottom of the rear panel. A separate extendible vent hose can be attached if desired.

3) FRONT VENTING

This is a special type of dryer which vents through a grille on the plinth. The opening on the rear panel is blanked off during manufacturing.

Rear vented dryers can be used without a vent hose but not in a confined space. Rear vented machines must have a vent hose if they are installed under a work surface. To minimise condensation it is preferable to vent through a vent hose to outside. This may be through an open door or window. The best solution is to connect the vent hose to a permanent connection through a wall or a single glazed window.

This is particularly recommended for small, cool rooms. A kit for this purpose is available as an accessory. Front venting machines must be converted to extendible rear venting before a permanent connection can be made to the outside.

When using a vent hose, remember the following points:

- The vent hose must be at least 10cm (4 ins) in diameter.
- No more than three right-angled bends should be allowed when positioning the vent hose.
- Do not distort or constrict the vent hose as this will reduce the airflow.
- The vent hose must not be shared with other appliances, for example, a cooker hood outlet.

FINAL INSTALLATION

If you wish to change the side on which your door opens, see the instructions on the back page.

Remove any dust by wiping the drum and door with a damp cloth. Any initial smell of burning will be caused by dust on the heater and will quickly disappear.

FITTING OF FILTER

Slide the filter into its operating position (see diagrams).



OPERATION

Open the door.

Load clothes loosely into the drum.

Load sheets first, starting with one corner.

Close the door.

Dry your hands.

Check that the timer is in the '0' position.

Plug in the machine.

Select correct heat position (see programme chart on control panel for recommendations).

Set the timer to the required time setting (see programme chart on control panel for recommendations), then press start button if fitted.

The drum will begin rotating. Reversing drum models will stop periodically to rotate in the reverse direction for a short time.

Should the clothes become dry before the cycle has finished, or if an excessive programme time has been selected, the drum will continue to rotate while the thermostat will automatically regulate the heater to reduce the risk of over-drying.

If the door is opened during a cycle the dryer will stop. To restart, close the door and press the start button (if fitted). When drying large items such as sheets, we suggest you periodically stop the dryer to redistribute the load.

There is an automatic 12 minute cool down period at the end of every cycle, during which the heater is switched off. This helps to minimise creasing and must always be used fully to avoid the risk of fire.

NEVER SWITCH THE DRYER OFF AND LEAVE A HOT LOAD IN THE DRUM - RISK OF FIRE.

To lengthen or shorten a timed programme, reset the timer knob.

ALWAYS CLEAN THE FILTER AFTER EACH USE.

Failure to clean the filter will extend drying times and could cause the safety cut-out to operate.




- Pull the filter upwards and away from the appliance.
- Remove any threads or fluff by hand or with a soft brush.
- Slide the filter back
- Wash the filter occasionally in detergent solution using soft brush to remove small particles.

If your filter becomes damaged, replace it to ensure no damage is caused to the dryer.

THE CONTROLS




A. THE TIMER

Select the required drying time based on the recommendations on the control panel.

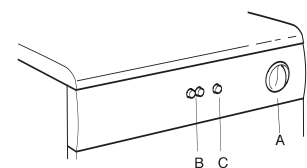


B. HEAT SWITCH(ES)

Select the required heat setting based on the recommendations on the control panel.

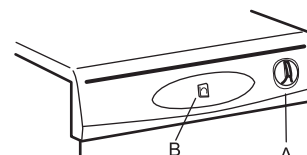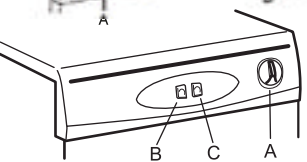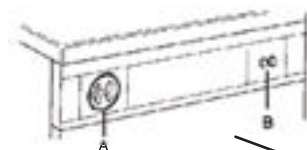

C. START BUTTON (if fitted)

Press start button after closing the door and selecting the required drying time

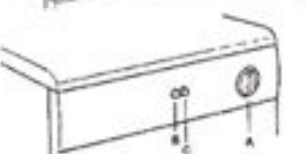

PREPARATION

Check care labels inside the garments.

CARE LABELS YOU MAY FIND ON YOUR FABRICS

	Suitable for tumble drying
	Tumble dry using full heat
	Tumble dry using half heat
	Do not tumble dry

Do not tumble dry woollen or wool mixture articles unless the article is labelled as being suitable. This should avoid shrinkage.

Do not attempt to dry dripping wet articles.

Place delicate articles e.g. tights, scarves, inside a pillowcase.

To avoid the need to iron easycare polyester/cotton items it is better to only dry small loads (i.e half fill drum).

It is better to dry small and large articles together.

We suggest a fabric conditioner be used to reduce static electricity.

Do not overload the dryer or dry large bulky items such as duvets or sleeping bags as it is important that the airflow through the dryer is not obstructed.

Do not place items contaminated with inflammable substances in the dryer, such as petrol, cleaning solvents, cooking oil, fat, or hair lacquer. These can cause fires. For the same reason, do not dry rubber, foam rubber, plastic or paper.

ADDITIONAL INFORMATION

ANY PROBLEMS

If the clothes are **not dry** after normal drying time:

- Check that you have used the correct heat setting.
- Check that you have not set the timer within a cool down period.
- Check that the lint filter has been cleaned. A blocked filter will restrict the airflow.
- Check that your dryer is heating - The area below the door to the right side, should feel warm to the touch after the first 10-15 minutes running. Failure to heat may indicate the safety cut-out has operated. To reset, simply press the red button at the rear of the machine.

If it has operated, a sharp "click" will be heard. This cut-out only operates if the airflow is severely restricted so make sure the filter is clean, the air inlets and outlets at the front and back are not blocked, and that all other restrictions are removed before re-starting.

If the cut-out continues to operate after checking the above points, you should contact your service agent.

If your machine **does not work** check the following before calling a service engineer:

- Check that the door has been properly closed and the machine is switched on. Press the start button (if fitted).
- Check that there is a supply of electricity.
- Check the fuse in the moulded plug.

OPTIONAL EXTRAS

Front to Extendible Rear Venting Kit

To convert your dryer from front venting to extendible rear venting.

Vent Hose

Only available for fixed rear dryers. Leads the warm, damp air to outside.

Wall/Window Vent Kit

To make a permanent connection through a wall or window. Front venting dryers need converting to rear venting before installing this kit (see 'Front to Extendible Rear Venting Kit' above). This kit is not suitable for double glazed windows.

Stacking Kit

To enable your dryer to be secured onto the top of a front loading washing machine (to save floor space).

The above items can be purchased as accessories for your tumble dryer from your supplier.

TECHNICAL DATA

OVERALL DIMENSIONS:

Height: 85 cm Width: 59.5 cm Depth: 53 cm

MAXIMUM DRY WEIGHT LOADS:

Cotton 6kg
(for minimum creasing 2kg)
Delicates 2kg

For electrical ratings see plate on back of dryer.

For Model No. see serial plate inside door (needed when requesting service).

Room temperature range 5°C to 30°C.

Your washing machine should have a spin speed of not less than 800rpm.